



EXCLUSIVE AUTOMOTIVE PRODUCTS

**REPLACEMENT SEAT ADAPTOR / PART NO: 659 (L&R) NISSAN NAVARA D22 1997 ON**  
**PLEASE READ THE INSTRUCTION IN FULL BEFORE FITTING AUTOTECNICA SEAT/S TO THE VEHICLE.**

1. Park the vehicle and ensure the hand brake is on.  
 Remove the original seat from the vehicle and retain the bolts removed to be used when refitting the new seat.  
 Remove the seat belt from the seat as it will be attached to the provided anchorage point of the new adaptor \*.

Place the Autotecnica seat upside down in a suitable position and place the 4 supplied spacers on the seat mounting holes.  
**"Photo (A)"**

**Photo (A)**



Contents:

- 4 X 15MM SPACERS
- 4 X 35MM M8 BOLTS
- 4 X SPRING WASHERS
- 1 X SEAT BELT BOLT, NUT, AND WASHER. Only use nut & washer

**2. This seat mount application has 2 fitting options**


**Option 1.** Place the assembled adaptor onto the new seat ensuring the seat holes line up with the adaptor mounting holes. This option has limited room available to insert and tighten the bolts at the front of the seat adaptor.

**NOTE:** The adaptor and slider complete assembly will attach to the seat without separating but it will be more time-consuming to tighten the two front bolts of the adaptor as there is limited space. **"Photo (b)"**

**Option 2.** We suggest separating the slider from the adaptor as it will make the installation of the adaptor to the seat easier. Starting from the front of the seat use the supplied bolts and washers to attach the slider onto the seat and secure the bolts. **"Photo (c)"** Once the slider is attached to the base of the seat, you then attach the frame to the slider. Starting from the front, attach the slider and frame together by using the bolts and nuts supplied. Using the adjusting lever "U shape" move the seat adaptor backward to locate the other two seat mounting holes. Use the bolts and nuts to the remainder of the seat holes and secure them. Ensure to check that all bolts on the adaptor and seat are correctly tightened. **"Photo (d)"**

\* Attach the removed belt to the seat/belt anchorage point of the adaptor by using the original spacer and bolt. The seat belt nut and washer supplied will need to be used in this application. Place the nut and washer at the back of the anchorage seat belt bracket and correctly secure.

**Photo (b)**

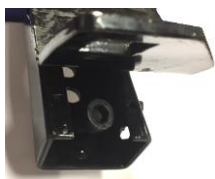

**photo (c)**



**Photo (d)**



Place the assembled seat onto the vehicle's original seat mounting holes by aligning the holes of the adaptor to the vehicle and bolt in position with the 4 original bolts and washers. Tighten all bolts to correct tension.  
**Do not fully tighten any of the bolts until all floor bolts have been aligned correctly.**



All Images used for illustration purposes only

**Note: The Autotecnica seats and the 639F adjusters (sliders) are ADR approved.**

**We recommend however that the seat conversion is checked by an accredited engineer after fitting the seat or seats to vehicle.**