



EXCLUSIVE AUTOMOTIVE PRODUCTS

SEAT FITTING INSTRUCTION AUTOTECNICA SEATS
REPLACEMENT SEAT ADAPTOR / PART NO: 672 (L&R) J80 TO 1992

PLEASE READ THE INSTRUCTION IN FULL BEFORE FITTING THE AUTOTECNICA SEATS TO THE VEHICLE.


1. Park the vehicle and ensure the hand brake is on.
 Remove the seat from the vehicle and retain the bolts removed to be used when refitting the new seat.

THE ADAPTOR NEED ASSEMBLING: PLACE AND SECURE THE LEFT AND RIGHT SLIDERS ONTO THE THE ADAPTOR WITH THE 4 BOLTS AND WASHERS SUPPLIED. SHORTER SIDE LENGHT OF SLIDER MUST POINT TOWARDS THE FRONT OF THE SEAT. USE THE LOCKING MECHANISM ON THE SIDE OF THE SLIDER TO MOVE IT FORWARD OR BACKWARDS SO THAT IT CAN BE CORRECTLY POSITIONED ONTO THE ADAPTOR. ONCE POSITIONE ENSURE TO TIGHEN ALL THE BOLTS. KEEP THE SLIDERS INNER SHAFT IN AN EVEN POSITION SO THAT THE ADJUSTABLE "U" SHAPE HANDLE OF THE SLIDER CAN BE CORRECTLY FITTED. PHOTO "A" "B"

Place the Autotecnica seat in an upside down suitable position and place the supplied 15mm spacers on the seat mounting holes.

Note: The 15mm x 4 spacers need to be used, but it all depends on which Autotecnica seat the adaptor will be fitted. **PHOTO "AA"** If the seats side adjustable lever does not interfere with the side of the sliders the spacers can be removed, or you can use accordingly to the seat height you prefer. **"Photo (AA)"**

PHOTO "A"  **NOTE: LOCKING MECHANISM**

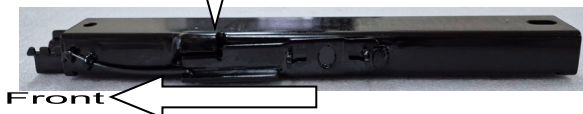

- 4 X 15MM WASHERS (Spacers)
- 4 X 35MM M8 BOLTS
- 4 X SPRING WASHERS
- 4 X FLAT WASHERS

Place the assembled adaptor onto the seat ensuring the 4 seat bolt holes line up to the adaptor mounting holes.

- Starting from the rear of the seat use the bolts and washers supplied to attach the adaptor/slider onto the seat.
 - Secure the bolts but do not tighen **"Photo (B)"**
2. Using the adjusting lever "U shape" move the seat adaptor frontwards to locate the other two mounting holes. Place and secure the bolts to the other two mounting holes. Tighten all bolts to the correct tension. **"Photo (C)"**

U Shape handle 

Photo (B)

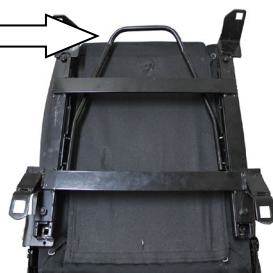


Photo (C)



3. Place the assembled adaptor/slider onto the vehicle seat mounting holes, aligning the holes of the adaptor to that of the vehicle floor. Use the 4 original bolts and washers and secure all bolts to the correct manufacturer tension. **Do not fully tighten any of the bolts until all floor bolts have been aligned correctly**



Image used for illustration purposes only

Note: The Autotecnica seats and the 639F adjusters (sliders) are ADR approved.

We recommend however that the seat conversion is checked by an accredited engineer after fitting the seat or seats to vehicle.