




EXCLUSIVE AUTOMOTIVE PRODUCTS

TOYOTA LANDCRUISER 70-76-79 SERIES WITH BUCKET SEATS SEAT FITTING INSTRUCTION PART NO. 676TR

Contents:

Hardware

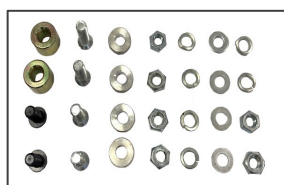

- 2 x 15mm spacers
- 2 x 30mm M8 bolts
- 4 x 30mm countersunk bolts
- 4 X 40mm round head bolts to be used in conjunction when using the spacer plate on the passenger side
- 4 x 5mm spacers
- 6 x M8 nuts
- 4 x Washers
- 6 x Spring washers

Spacer Plate BA



Conversion Plate "AA"



PLEASE READ THE INSTRUCTIONS IN FULL BEFORE FITTING THE AUTOTECNICA SEATS TO THE VEHICLES ABOVE.

1 - PARK THE VEHICLE AND ENSURE THE HAND BRAKE IS ON.

REMOVE THE SEAT FROM THE VEHICLE AND RETAIN THE BOLTS REMOVED TO BE USED WHEN REFITTING THE NEW SEAT/S.


2 - REST THE SEAT UPSIDE DOWN IN A SUITABLE POSITION AND REMOVE THE SEAT SLIDERS.

NOTE: PLEASE TAKE NOTE OF THE POSITIONING OF THE LEFT AND RIGHT SLIDERS, AS THEY MUST BE REINSTALLED IN THE SAME POSITION AS THEY WERE REMOVED FROM THE VEHICLE. **PHOTO (A)**

Photo "A"




Spacer Plate BA

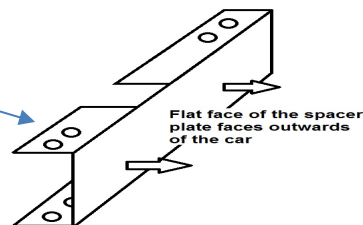

3 - THE SPACER Photo "BA" NEEDS TO BE SECURED TO THE SLIDER WITH THE ADJUSTING HANDLE Photo "C" 2 X 30mm M8 BOLT/ NUTS AND WASHES SUPPLIED.

Photo "BA"

Photo "C"

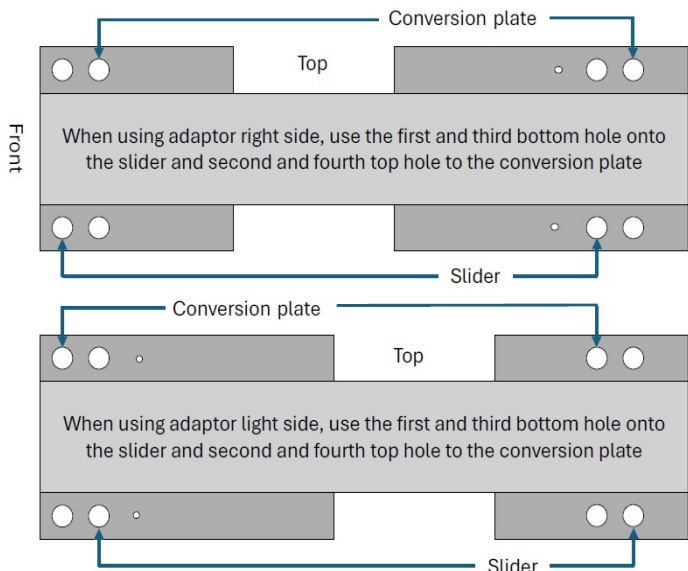

Note: The spacer plates **Photo BA** is made to suit the right and left of the vehicle. When using the spacer plate "top photo" for the **driver-side** application, use the 1st and 3rd bottom holes of the spacer plate onto the holes of the original slide with the handle. Use the 2nd and 4th holes of the spacer of the conversion plate "photo AA" and secured with provided bolts and nuts.*

Passenger side: Photo "BA" bottom photo. Use the 2nd and 4th bottom holes to mount the spacer onto the slider without handle. Use 1st and 3rd holes to bolt the spacer to the conversion plate. **Ensure that the outer face of the spacer plate faces outwards.**

4- * PLACE THE CONVERSION PLATE WITH THE COUNTERSUNK HOLES FACING UP ONTO THE CORRECT HOLES OF THE SPACER PLATE **Photo "BA"** AND ONTO THE 2 HOLES OF THE OPPOSITE ORIGINAL SLIDER.

5 -When using the conversion plate for the passenger side, reverse the conversion plate so that the countersunk holes are at the bottom of the plate. Use the 4x 40mm bolts to attach the conversion plate to both the space plate and the original slider.

FOR THE RIGHT AND LEFT CONVERSION ENSURE TO INSERT THE 2 X 15mm SPACES SUPPLIED BETWEEN THE SLIDER WITHOUT THE HANDLE AND CONVERSION PLATE.

USE THE 4X30MM M8 BOLTS/NUTS AND WASHES TO ATTACH THE CONVERSION PLATE TO THE ORIGINAL SLIDERS. THIS IS FOR THE DRIVER SIDE.

ONCE THE CONVERSION PLATE IS COMPLETED SHOULD LOOK LIKE Photo "D". Ensure to secure all the bolts/nuts of the conversion plate before attaching to the seat.



Photo "D"

The conversion plate's wider side is towards the car door. See Photo "D" **This is also Applicable for the Passenger sides.**

FRONT OF SLIDER

6 - PLACE THE AUTOTECNICA SEAT UPSIDE DOWN IN A SUITABLE POSITION. INSERT THE 4X5mm SPACES TO EACH OF THE MOUNTING HOLES OF THE SEAT.

ATTACH THE COMPLETED CONVERSION ONTO THE SEAT MOUNTING HOLES. ENSURE THAT THE HOLES OF THE CONVERSION PLATE CORRESPOND THAT OF THE SEAT MOUNTING HOLES.

SECURE THE CONVERSION PLATE TO THE SEAT WITH THE BOLTS AND WASHERS SUPPLIED. NORMALLY WITH MOST AUTOTECNICA SEATS MOUNTING BOLTS ARE ALSO SUPPLIED.

ENSURE THAT THE SLIDER HANDLE IS AT THE FRONT R/H OF THE SEAT "PHOTO D" DRIVER SIDE AND THE OPPOSITE PASSENGER SIDE.

PLACE THE COMPLETED SEAT CONVERSION INTO THE VEHICLE FLOOR MOUNTING HOLES USING THE ORIGINAL BOLTS REMOVED. SECURE AND TIGHTEN THE SEAT TO THE VEHICLE FLOOR CORRECTLY.



Example only.

NOTE: THE AUTOTECNICA SEATS ARE ADR APPROVED; WE RECOMMEND HOWEVER THAT THE CONVERSION/S IS CHECKED BY AN ACCREDITED ENGINEER AFTER FITTING THE SEAT OR SEATS TO THE VEHICLE...