

AUTOTECNICA IMPORTS PTY LTD
48 NORTHGATE DRIVE
THOMASTOWN 3074
VICTORIA AUSTRALIA
WWW.AUTOTECNICA.COM.AU
TELEPHONE (03) 9464 2200
FACSIMILE (03) 9464 1400
A.C.N. 004 230 639
ABN 24 847 451 725



EXCLUSIVE DISTRIBUTORS OF:
MONZÀ
ADVENTURER

EXCLUSIVE AUTOMOTIVE PRODUCTS

SEAT FITTING INSTRUCTION: HOLDEN RODEO RA 2003/06 PART NO. 682LR

PLEASE READ THE INSTRUCTION IN FULL BEFORE FITTING AUTOTECNICA SEATS TO THE VEHICLE.

- 1 - Park the vehicle and ensure the hand brake is on.
Remove the seat from the vehicle and retain the bolts removed to be used when refitting the new seat.
- 2 - Place the seat upside down in a suitable position and remove the sliders from the original seat. Ensure to take note (of the left and right positions of the sliders)
- 3 - Place the two removed sliders upright on a flat surface in the same position as if they were to be attached to the floor of the vehicle. See "**Photo (A)**"

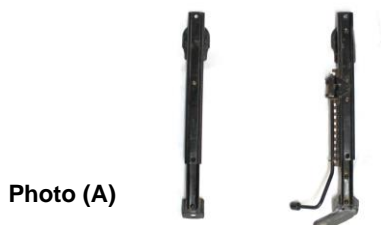


Photo (A)

- 4 - Place the new seat adaptor **Part No: **682LR** "**Photo (B)**" onto the rear of the sliders making sure the slotted holes of the adaptor are in the inner side of the rails.

Fit the remaining adaptor to the front of the sliders "**Photo (B)**" with the slotted holes as above.
Secure adaptors onto the sliders with the original nuts. Some adjustments might be needed when lining both adaptors and sliders to the new seat.



Photo (B)

- 5 - **Note:** At the rear of the original sliders there are two nuts on either side holding the seat height brackets. Remove the two brackets and retain the 4 nuts. See "**Photo (C)**". Removing these brackets will facilitate the seat's bolting to the rear of the sliders.



Photo (C)

- 6 - The adaptors are supplied with 4 x 12mm spaces. Use 2 x 12mm spaces one per side. On top of the adaptor "**See Photo (D)**" with provided bolts and washers and attach the adaptor and height brackets "**Photo (E)**" to the rear of the Autotecnica seat.



Photo (D)

Photo (E)



7 - Use the remaining 2 x 12mm spaces to the front adaptor same as “**Photo (D)**”


Place the seat with the attached adaptor onto the sliders.

Secure the height brackets onto the sliders with the 4 original nuts removed. Use the 2 remaining bolts to attach the sliders to the front of the seat mounting holes.

Ensure the seat, adaptors, and sliders are lined up and securely tighten all bolts and nuts.

8 - See “**Photo (F)** 1 seat bolt positioned onto the sliders.

Photo (F)

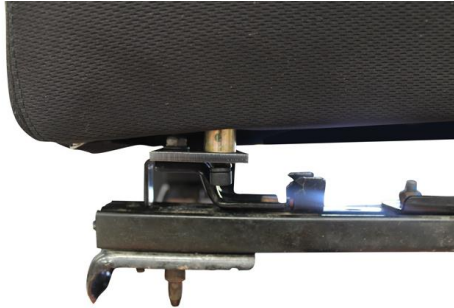

9 - Place the assembled seat in the vehicle mounting bracket. Using the original bolts secure the seat to the correct tension.

The replacement of the right and left seat conversion requires the same application

Note: The Autotecnica seats and the 639F adjusters (sliders) are ADR-approved.

We recommend however that the seat conversion is checked by an accredited engineer after fitting the seat or seats to the vehicle.

Fitting Kit:

