

**AUTOTECNICA IMPORTS PTY LTD**  
48 NORTHGATE DRIVE  
THOMASTOWN 3074  
VICTORIA AUSTRALIA  
WWW.AUTOTECNICA.COM.AU  
TELEPHONE (03) 9464 2200  
FACSIMILE (03) 9464 1400  
A.C.N. 004 230 63  
ABN 24 847 451 725



EXCLUSIVE DISTRIBUTORS OF:  
**MONZÄ**  
**ADVENTURER**

EXCLUSIVE AUTOMOTIVE PRODUCTS

**AUTOTECNICA SEAT FITTING INSTRUCTION**  
**TO SUIT JEEP WRANGLER JK PART NO.692. SUITS VEHICLES WITH THE SEATS CAN SEPARATE FROM ORIGINAL FRAMES**

**PLEASE READ THE INSTRUCTION IN FULL BEFORE FITTING AUTOTECNICA SEAT/SEATS TO THE VEHICLE**

1. Park the vehicle in a suitable position and ensure the hand brake is on.
2. To remove the seat from the vehicle and separate the seat from the seat frame please follow the instructions below as it will make the conversion easier.

Before removing the seat from the vehicle please unplug the seat belt warning light under the seat. See Photo A.

Remove the seat belt outer mounting bolt from the seat and retain the bolt to be used when fitting the seat to the vehicle. See Photo B.

Photo A.



Photo B.



3. Remove the seat from the vehicle by unbolting the 4-floor bolts and retaining the bolts to be used when refitting the new seat.

Place the seat in a suitable position.

Remove the seat belt stalk and retain the bolt for later fitment. See photo "C"

With the manual adjusting height lever, adjust the seat to its maximum level to allow sufficient room to separate the seat from the original slider. See Photo D. Note: The seat adjustment height lever cannot be used once the new seats are fitted.

There are 8 x 13mm nuts holding the original slider to the seat. Using a 13 mm open end, ring spanner, and socket will allow you to separate the seat from the slider. Remove and retain the 8 nuts to be used when assembling the original frame to the adaptor. Original assembly. See Photo E.

Photo C.



Photo D.



Photo E.



4. Place the adaptor Photo F1 onto the original seat frame, using a 13mm socket "See Photo F2." Insert the 8 nuts removed from the original frame and secure in a cross-sequence action. See Photo G.

Photo F1.


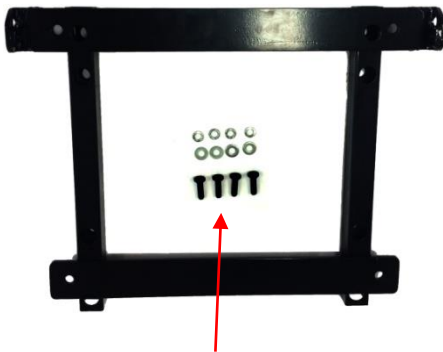


Photo F2.



Photo G.

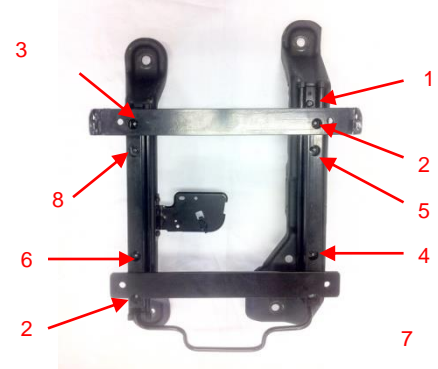

**ADAPTOR CONTAINS**

4 x 35mm ALLEN KEY Bolts to be used when bolting adaptor to the new seat  
8 x Washers

5. Rest the Autotecnica seat onto a bench "See Photo H" & attach the assembled original frame & adaptor See Photo "I". Ensure the 4 holes on the adaptor correspond to the seat mounting holes. See Photo I. Pass the seat belt warning light loom under the adaptor before bolting the seat adaptor to the seat "See Photo J". Using the 4 x 35mm bolts and washers supplied securely the assembled adaptor to the seat. Bolt the seat belt stalk to the completed adaptor assembly "See Photo K". Check that all the bolts are tightened.

Photo H.

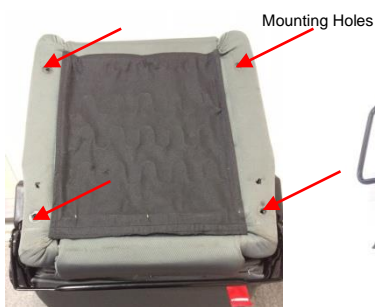


Photo I.

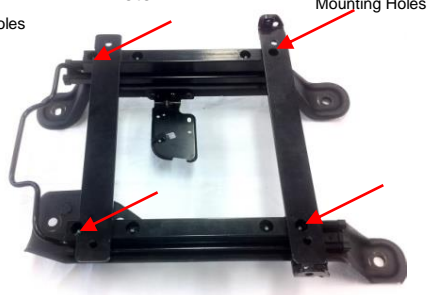


Photo J.

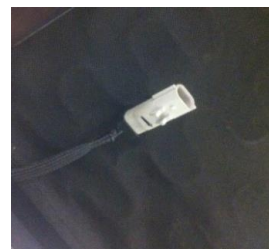


Photo K.



6. Place the seat into the vehicle, ensure that the 4 holes of the slider/adaptor correspond to the mounting holes on the vehicle floor, and secure. "See Photo L." Plug the seat belt warning light under the seat, attach the lap part of the belt to the side of the seat & secure it with the original bolt "See Photo M".

Photo L.



Photo M.



7. Photo N. Below is the seat installed into the vehicle.

Photo N.



***Note: The Autotecnica seats ADR Approved.***

**We recommend however that the seat conversion is checked by an accredited engineer after fitting the seat or seats to the vehicle.**